
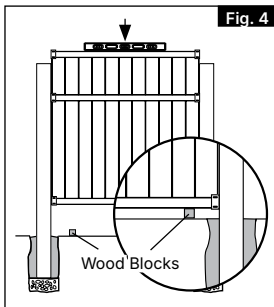


Using Set screw measurements from panel installation instructions, pre-drill and install Set screws as anchors to hang the panel from (Fig 3).

3. Hang Panel:

Hang the panel on the screws between the posts. To help stabilize the panel, use wood spacer blocks on the bottom and check alignment with a level (Fig. 4).

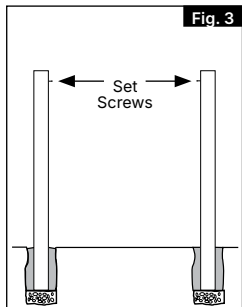


4. Install Panel:

Next, install the remaining screws for the brackets into the posts (Fig. 5).

5. Repeat:


Repeat steps for all remaining panels and carefully measure from panel to panel to keep visually aligned. The Set screw position

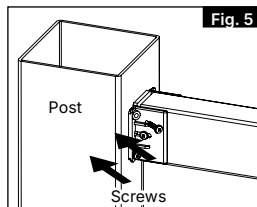

may require adjustment depending on your varied terrain.

6. Finish:



Add decorative bracket covers to all brackets installed (Fig. 6).

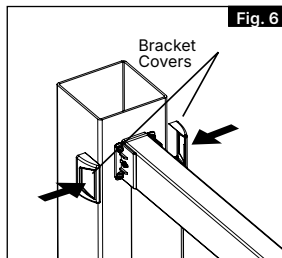

Con las medidas de los tornillos de sujeción de las instrucciones de instalación del panel, perforo y coloque los tornillos de sujeción como anclajes para colgar el panel (Fig. 3).

3. Colgar el panel :

Cuelgue el panel de los tornillos entre los postes. Para ayudar a estabilizar el panel, utilice los bloques espaciadores de madera en la parte inferior y compruebe la alineación con un nivel (Fig. 4).

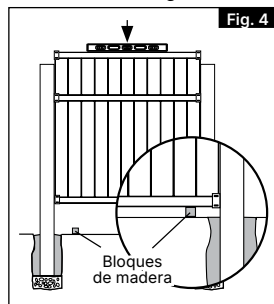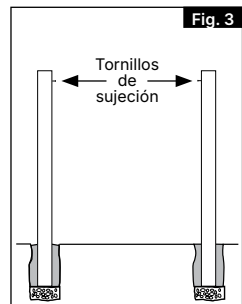


4. Instalar el panel:

A continuación, instale los tornillos restantes para los soportes en los postes (Fig. 5).

5. Repetir:


Repita los pasos para el resto de los paneles y mida cuidadosamente de un panel a otro para mantenerlos visualmente

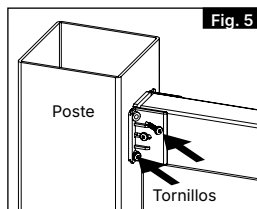

alineados. La posición del tornillo de sujeción puede requerir ajuste en función de la variación del terreno.

6. Acabado:

Coloque las cubiertas decorativas de los soportes en todos los soportes instalados (Fig. 6).

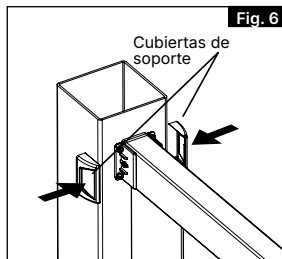

SET & SECURE™ BRACKETS FOR PRE-ASSEMBLED VINYL FENCE PANELS

WORKS WITH:
ALL CATALYST
PRE-ASSEMBLED
VINYL FENCE
PANELS



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit: CatalystFence.com.

In case of a warranty claim, call 888.549.7350.



SOPORTE DE SET & SECURE™ DE LA VALLA DE VINOLO

FUNCIONA CON:
TODOS LOS
PANELES DE
VALLA DE VINOLO
PREMONTADOS
CATALYST



Lea todas las instrucciones antes de la instalación del producto.

Consulte las instrucciones de seguridad del fabricante cuando vaya a utilizar alguna herramienta.

Para registrar su producto, visite: CatalystFence.com.

En caso de reclamación de garantía, llame 888.549.7350.

**WARNING:**

- Improper installation of this product can result in personal injury. Always wear safety goggles when cutting, drilling and assembling the product.
- Incorrect installation may cause harm to the panel or individual.

**NOTICE:**

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: **888.549.7350**.

Please read the instructions completely before assembling. Retain manual and your dated sales slip for future reference or warranty claims.

To obtain and review a copy of the warranty please visit **CatalystFence.com**. You may also contact us at **888.549.7350** or email **info@CatalystFence.com**.

**ADVERTENCIA:**

- La instalación incorrecta de este producto puede provocar lesiones corporales. Utilice siempre gafas de seguridad al cortar, taladrar y ensamblar el producto.
- La instalación incorrecta puede causar daños a la panel o a personas.

**AVISO:**

- No intente instalar el kit si faltan piezas o las piezas están dañadas.
- no devuelva el producto a la tienda; para solicitar ayuda o piezas de repuesto llame al: **888.549.7350**.

Lea las instrucciones en su totalidad antes de comenzar a instalar. Conserve el manual y el recibo de compra fechado para futura referencia o reclamos de garantía.

Para obtener y revisar una copia de la garantía, sírvase visitar **CatalystFence.com**. También puede contactarnos en el **888.549.7350** o enviar un correo electrónico a **info@CatalystFence.com**.


TOOLS/MATERIALS NEEDED:

Fence Panel
Fence Posts
Level
Tape Measure
Safety Glasses

Pencil
#2 Square Drive Bit
Drill
½" Drill Bit
(2) 2" Wood Spacer Blocks

Component List:

QTY	Description
2	1¼" x 2¾" Brackets
4	Bracket Covers
14	#10 x ¾" Stainless Steel Pan Head Square Drive Screws

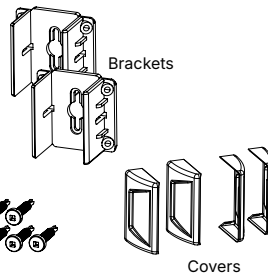
**HERRAMIENTAS/MATERIALES NECESARIAS:**

Panel de valla
Postes de valla
Nivel
Cinta métrica
Gafas de protección

Lápiz
Punta de destornillador cuadrado #2
Taladro
Broca de 3.17 mm
(2) Bloques espaciadores de madera de 5 cm (2")


Lista de los Componentes:

CTD	Descripción
2	Soportes de 1¼" x 2¾"
4	Cubiertas de soporte
14	Tornillos de cabeza achatada cuadrada de acero inoxidable de #10 x ¾"

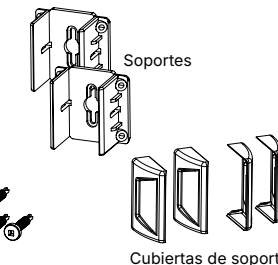


Before installing brackets, refer to panel instructions for proper post installation and spacing.

- 1. Add Brackets to Panels:**
Slide brackets onto each rail of the panel. Pre-drill and secure with provided screws (Fig. 1).

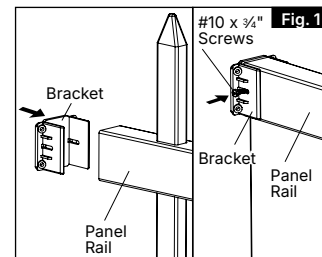


- 2. Add Set Screws to Posts:**
Use provided #10 x ¾" screws as a Set screw. Leave at least ½" of the screw exposed to hang bracket onto (Fig. 2).

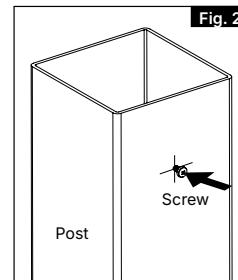

Antes de instalar los soportes, consulte las instrucciones del panel en cuanto a la instalación y separación adecuada de los postes.

- 1. Añadir los soportes a los paneles:**
Deslice los soportes en cada travesaño del panel. Perfore y fije con los tornillos suministrados (Fig. 1).

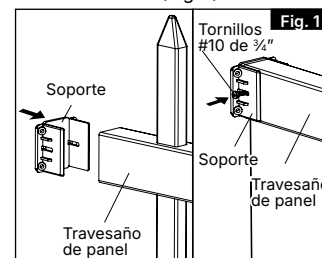

- 2. Añadir los tornillos de sujeción a los postes :**
Utilice los tornillos #10 x ¾" suministrados como tornillos de sujeción. Deje por lo menos ½" del tornillo expuesto para colgar el soporte (Fig. 2).

